





INSTRUCTIONS

Item 15119 - Rotisserie Grill and Spit

Thank you for purchasing this Texsport grill and spit. Please read and understand each step of the set-up instructions. We encourage you to set-up this tent at least once prior to your outdoor trip, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new grill and spit and that it will give you many years of outdoor pleasure.

PLEASE FOLLOW THE SEQUENCE OF IMAGES TO ASSEMBLE YOUR ROTISSERIE GRILL AND SPIT.

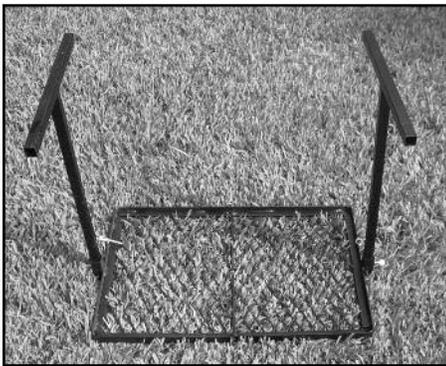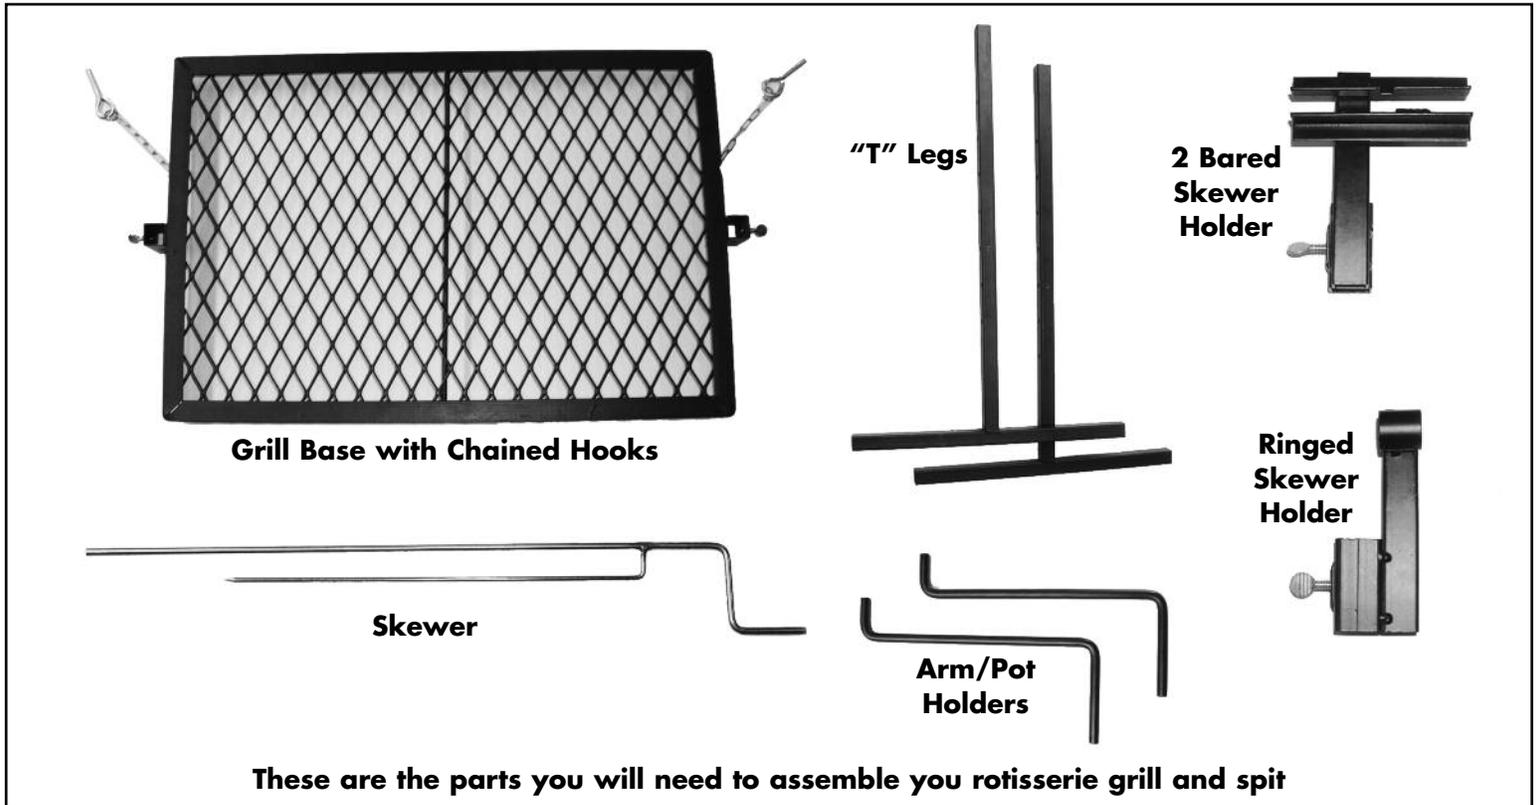

STEP 1 - Lay grill base upside down and insert the 2 "T" legs into the square leg holders. Secure slightly by turning the screw clamp on each side of the grill.




STEP 2 - Secure slightly by turning the screw clamp on each side of the grill.



STEP 3 - Flip assembly right side up and slightly loosen the screw clamps to lower the grill base to desired position. Tighten the screw clamps.




STEP 4 - Insert the chained pin into the "T" legs to secure the grill base completely.

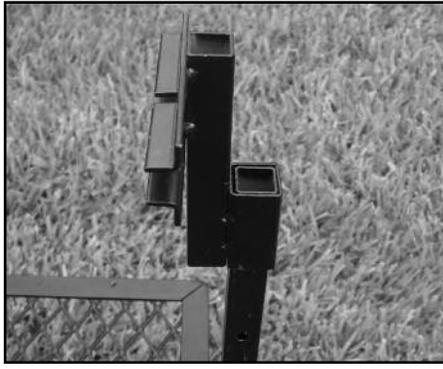

STEP 5 - Insert the 2 bared skewer joint to the top of the "T" leg and secure with the clamp screw.




STEP 6 - Insert the ringed skewer joint to the top of the "T" leg and secure with the clamp screw.

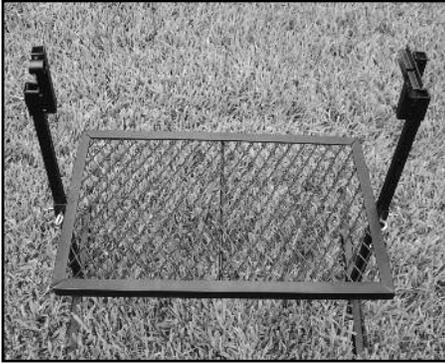


STEP 7 - Your skewer holder joints should be facing each other as pictured.




STEP 8 - Insert the arm/hot holders into the skewer holder joints.

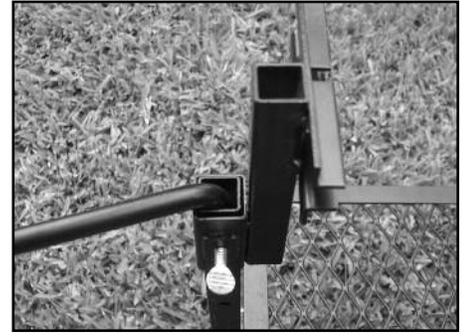


STEP 9 - If your pots are heavy, we suggest that you insert your arm/pot holder into the "T" leg holes for better support.

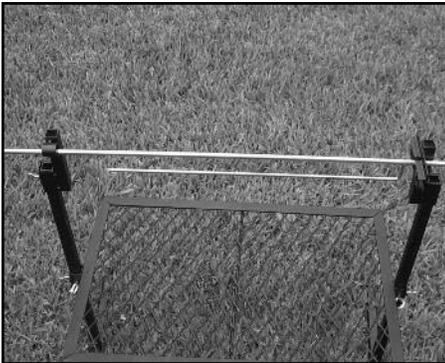

STEP 10 - Insert the skewer bar into the ringed skewer holder joint and slide the bar between the 2 bared skewer joint.

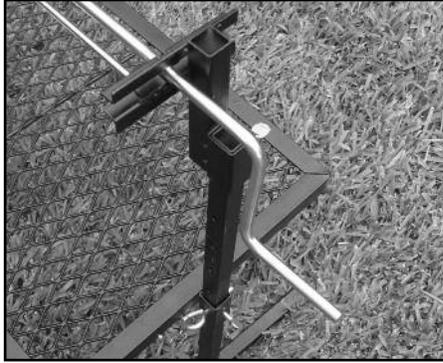


STEP 11 - To get the best rotisserie results, there are 4 different positions for all around cooking. The first position with the skewer handle down.

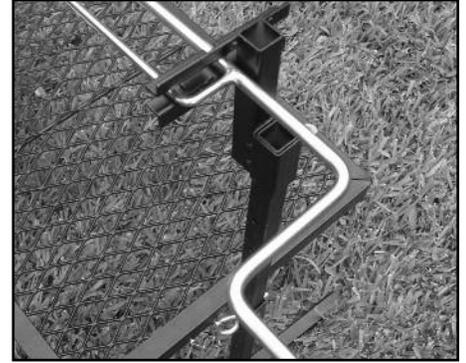

STEP 12 - Turning the skewer handle 90° for the second position.



STEP 13 - Turning the skewer handle another 90° (straight up) for the third position.

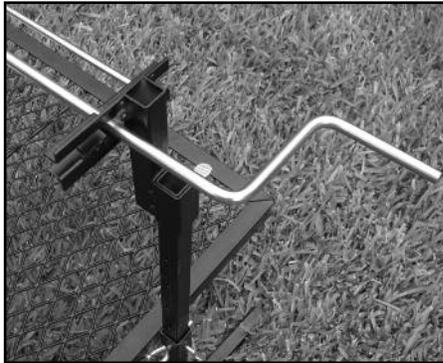

STEP 14 - Turning the skewer handle another 90° for the fourth position.

QUESTIONS:

If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail info@texsport.com. This Department is open M-F from 8 a.m.-5 p.m. CST.