




Assembly Instructions

ITEM 02820
Screen House

FIXED

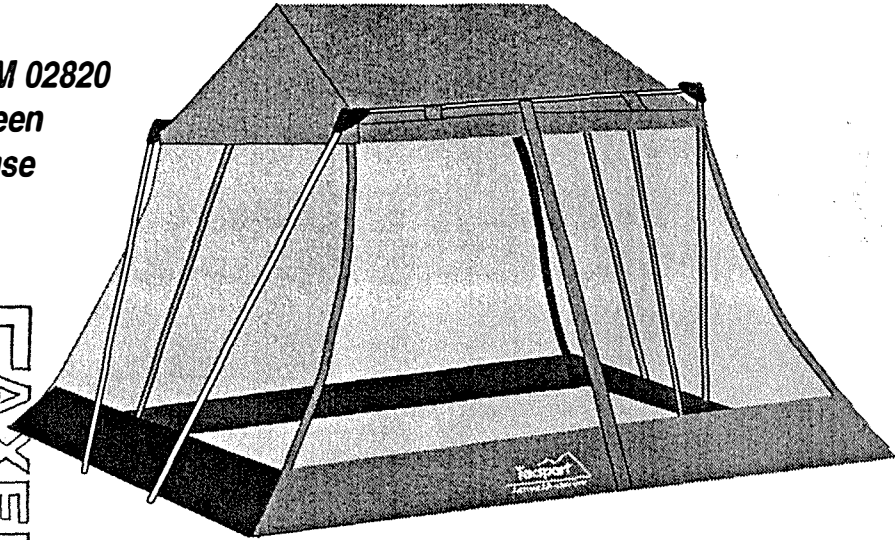


Assembly Diagram

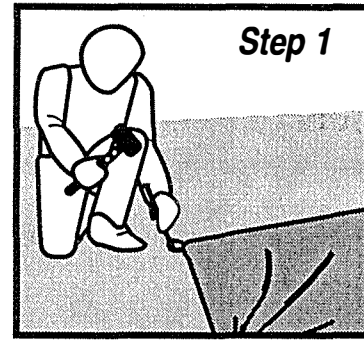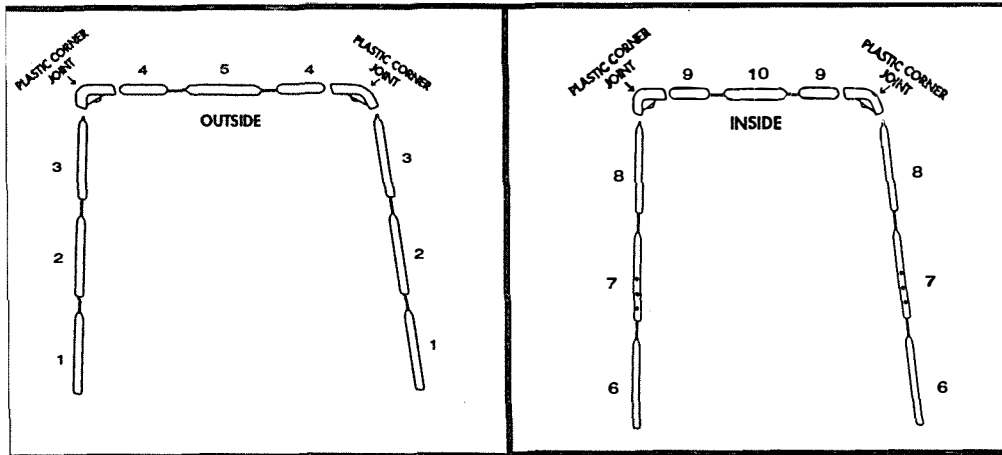

Step 1


Unpack screen house and frame. Making sure zippers are closed, spread screen house flat and stretch base to eliminate slack. Drive stake into each of the four corner loops, at a slight angle, then drive remaining stakes into side loops. Check frame sections, separate by number code.

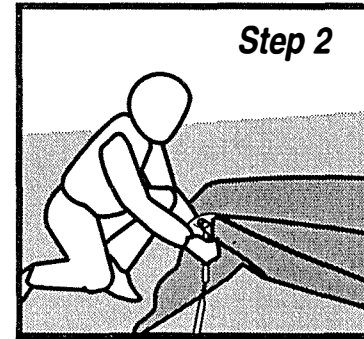

Step 2

Step 2



To aid pole assembly, refer to assembly diagram. Do not apply excessive force to screen house or poles. Slide section 4,5,4 through loops on ridge. Assemble upright sections 3,2,1 and insert these sections into plastic corner joints. Repeat procedure with the other outer ridge sections.

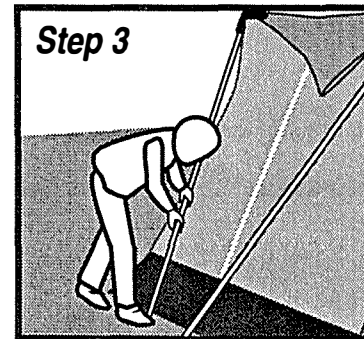

Step 3

Step 3

Raise one side of the screen house by bringing the pole tips toward side stakes. Raise other side in same manner. Adjust so screen house is fairly tight on sides. Tie strings at plastic corner joints of peak poles tightly.

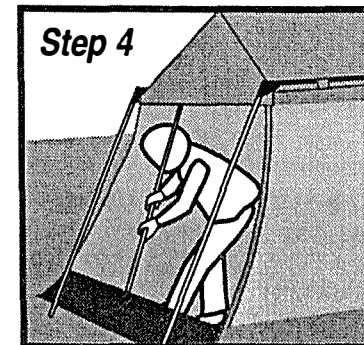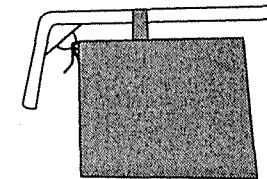

Step 4

Step 4

Assemble inner pole ridge sections 9,10,9. Insert into corner joint, then join to sections 8,7,6, adjust to medium length. Now stand pole section up and tighten by adjusting section 7 pole section. Tie strings at plastic corner joints of both side poles tightly. Your screen house is now ready for use.

QUESTIONS

If you should have any questions, problems, or comments please call our Customer Service Department at 1-800-231-1402. This Department is open M-F from 8:00 a.m. until 5:00 p.m. CST www.texsport.com.