





ASSEMBLY INSTRUCTIONS

1. Unroll and unfold the tent on the ground.
2. Assemble all the spring-clipped poles. Make sure each section is fully inserted into the next section. (figure 1)
3. Find the "Spider" joint inside the stake bag. Place the spring-clipped end of the #1 poles into the "spider" joint. (figure 2)
4. Continue placing the # 1 pole arms into the spider joint until all four arms are attached. (figure 3)
5. Drape tent over frame. **IT IS VERY IMPORTANT THAT YOU LINE THE BLUE LEG PANELS OF THE TENT UP WITH THE ARMS OF THE FRAME.** (figure 4)
6. Ask a second person to help. Step under the tent and grasp the frame carefully near the spider. Use both hands to hold the tent poles in place, and lift the frame over your head. Have the second person place a pin at each corner of the tent into the the end of each tent pole.
7. Wrap hook and loop fasteners at eaves around tent poles. Fasten the toggle and loops around the tent poles. Pick up the screen house and move it into place. Stake down the four corners and the beackets in between the corners. (figure 5)

NOTE: In windy conditions, storm loops on roof should be guyed out with additional ropes (not provided).

TAKE DOWN TIPS: Unstake the tent. Untie fabric ties. Disconnect hook and loop fasteners. Remove corner pins from the ends of the tent poles. Make sure you pack up the spider..

No. 02846
DELUXE CAMP SITE SCREEN HOUSE

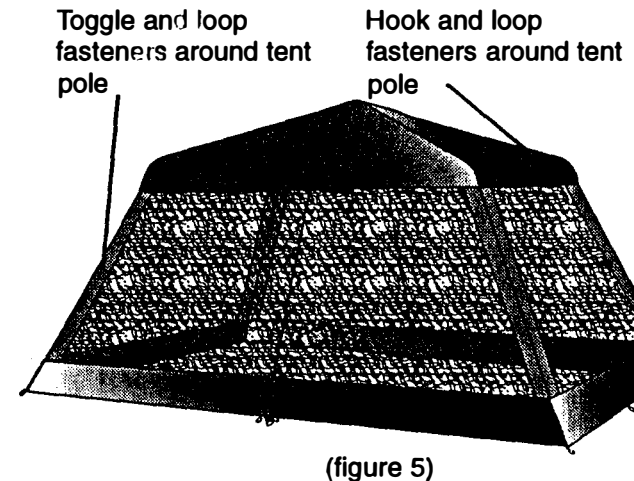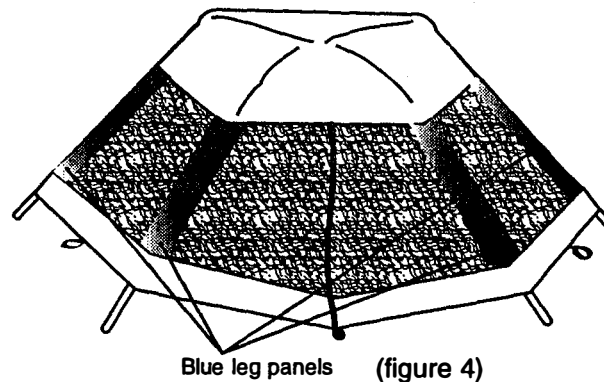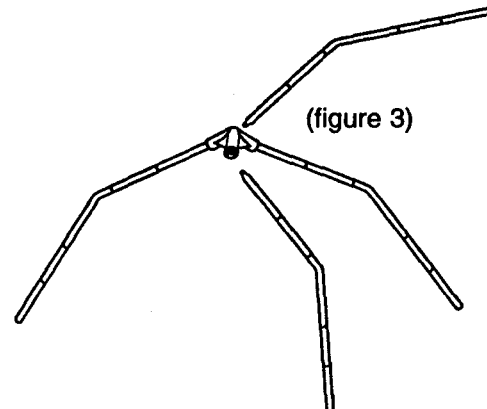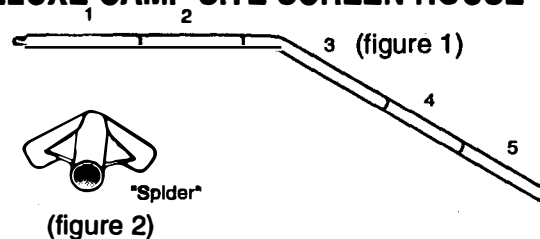

QUESTIONS

If you should have any questions, problems, or comments please call our **Customer Service Department** at 800-231-1402. This department is open M-F from 8:00 a.m. until 5:00 p.m. CST.