



ASSEMBLY INSTRUCTIONS

#02906 Wayford Screen Arbor

Thank you for purchasing this Texsport arbor. Please read and understand each step of the set-up instructions. We encourage you to set-up this arbor at least once prior to your outdoor event, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new arbor and that it will give you many years of outdoor pleasure.


Do not apply excessive force to this product.

Parts List:

- A 1 Screen arbor skin
- B..... 2 Long fiberglass roof poles
- C..... 4 steel leg poles
- D 1 Short fiberglass, rubber capped roof pole
- E..... Guy ropes, clews and stakes

NOTE:

Prepare your camp site by removing all sharp stones, twigs, etc. The site should be flat and have no depressions that could collect rain water.

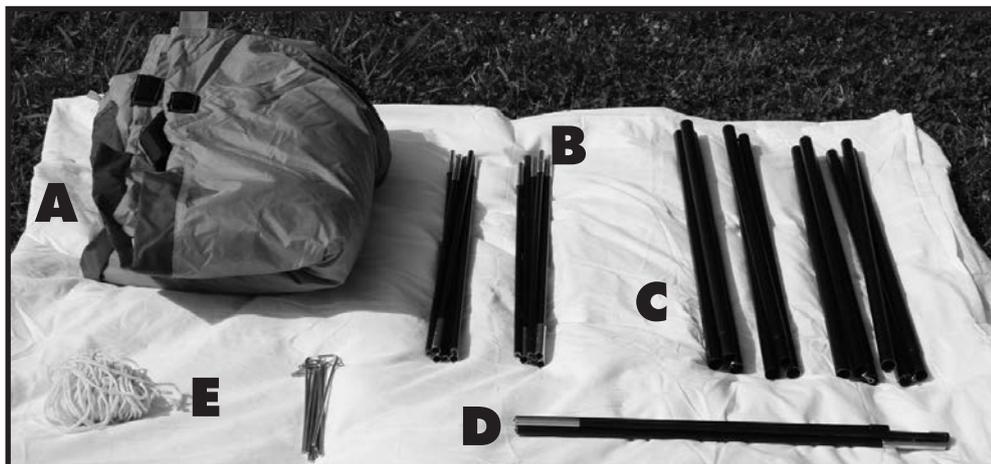

Step 1 - Spread out screen arbor skin.




Step 2 - Assemble the 2 long roof poles (B), and insert into the roof sleeves.




Step 3 - Insert the roof poles (B) into the attached molded corner joints.



Step 4 - Assemble the short rubber capped, roof poles (D), and insert into the roof sleeves.

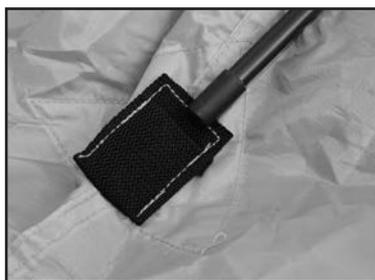

Step 5 - Insert rubber capped, roof pole (D) into the web pocket to secure.

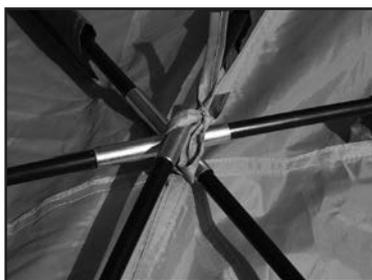

Step 6 - To secure, tie all poles together at top of arbor skin.



Step 7 - This is what your arbor roof should look like at this point.



Step 8 - Assemble the leg poles (C) and insert into the attached molded corner joint.




Step 9 - Attach speed clips to the leg poles.



Step 10 - Insert the pin and ring into the leg poles.



Step 11 - Stake down at all pin and rings.

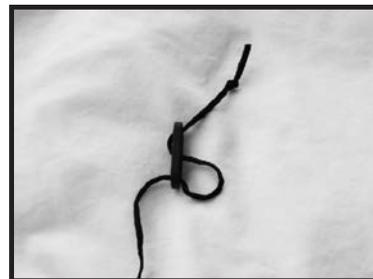

Step 12 - Secure your screen arbor with guy ropes. Insert the guy rope into clew as shown above.



Step 13 - Tie the guy ropes to the tabs on the screen arbor



Step 14 - Loosen the guy rope as shown to wrap around a stake.



Step 15 - Wrap around a stake.



Step 15 - Adjust the tension on the guy rope by sliding the clew up or down.



Step 17 -Your assembled screen arbor is now ready.

WARNING: Texsport arbor fabrics are flame retardant treated per C.P.A.I.-84 specification. However, for your safety, we recommend that **NO OPEN FLAME BE USED IN OR NEAR YOUR ARBOR.**

SOME ADDITIONAL INFORMATION: Always secure your arbor (with the arbor stakes included). Stake one corner, then stake each consecutive corner in a clockwise rotation. Make sure the arbor remains tight. Always place your arbor a safe distance from your campfire - unstaked arbor placed upwind of the fire can be blown into the fire. Arbor placed downwind of the fire are often showered with tiny sparks that can burn holes into the lightweight fabrics of your arbor.

WATERPROOFING YOUR ARBOR: Texsport arbors are made from coated water-repellent fabrics. However, the sewing process, necessary in all arbor fabrication, can cause water leakage where the sewing needles have perforated the fabric in the seams. Without treatment the arbor will leak. Every new arbor needs to be seam sealed to make it water tight. We recommend using Texsport Spray Waterproofing/Seam Sealer which may be found at your local outdoor outfitter or camping store. **DO NOT APPLY SEAM SEALER TO ZIPPERS.**

STAKES: All arbors should be staked down. The stakes supplied with your arbor are effective for most conditions; however, specialized stakes are recommended in certain cases:

- a. Sand Stakes: Long broad stakes designed to hold in loose sand.
- b. Steel Stakes: Most effective in hard, rocky or frozen soil. These can rust and their sharp edges could damage the arbor if stored with the arbor. In extremely hard soil a steel rod can be used to make the starter hole.
- c. Skewer Stakes: ... Lightweight, but less holding power than the standard stakes.

ZIPPERS: If zippers stick, lubricate with silicone. Never force a zipper which has material caught in it as this will bend the slider and prevent the zipper from closing. Continual use in a sandy environment can cause the slider to erode and fail to close the zipper.

STORAGE: Arbors should be stored dry and loosely folded away from heat and water. Keep out of reach of mice as they like to nest in arbors. Never store directly on concrete as moisture and chemicals in concrete may damage the fabric.

WASHING: Hand wash with a sponge using a mild soap. Never use detergents or washing machines as they may damage the coating or seams. Remember to use seam sealer once arbor has been washed to insure waterproofing.

HOW LONG WILL AN ARBOR LAST? Various conditions will affect the length of service which you receive:

- a. An arbor which is left erected all summer may last only one or two seasons as the sun's ultra-violet rays damage the fabric.
- b. Never store a arbor wet or damp as mildew may develop. It will not harm fabric, however, mildew is unsightly and may damage other parts of the arbor (i.e. zipper tapes)
- c. Avoid spraying insect repellent or hair sprays, etc. on arbor fabric as they may be harmful.

REPAIR: For small tears use a an adhesive backed rip-stop fabric patch. We recommend Texsport Repair Kit (#14113) which may be found at your local outdoor outfitter or camping store.

QUESTIONS: If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail info@texsport.com. This Department is open M-F from 8 a.m.-5 p.m. CST.