 


### #14110 - Shock-Cord Repair Kit

**Step 1. Remove old shock-cord from pole section.**

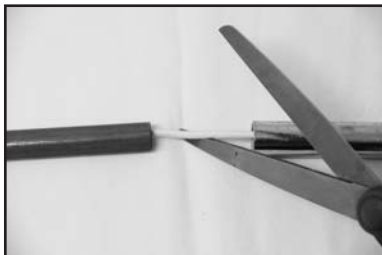

 
**Step 2. Replacement shock cord should measure 6" longer than tent pole. Place washer on one end of shock cord and tie a knot to keep it from coming off.**



**Step 3. Attach other end of cord to uncoiled wire with tape (not included) Make sure poles are in the correct order and pole ends with ferrules connect to pole ends without ferrules.**



**Step 4. Insert wire with taped cord into pole. Using a pair of pliers, push through the connecting poles.**

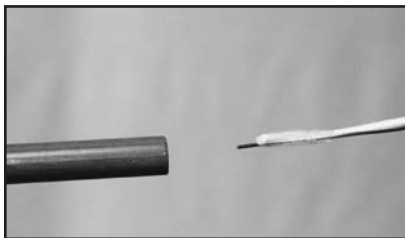

**Step 5. When cord is threaded through entire pole section, detach wire, slip washer onto shock cord then stretch cord about 6" out of pole and tie a knot behind the washer. Cut off excess cord.**

**Step 6. Replace original end caps or ferrules over knots. Glue on with water-proof glue if necessary.**

#### Questions:

If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail [info@texsport.com](mailto:info@texsport.com). This Department is open M-F from 8 a.m.-5 p.m. CST.