



ASSEMBLY INSTRUCTIONS

14285 High Island™ Hammock & Stand Combo

Thank you for purchasing this Texsport hammock stand. Please read and understand each step of the set-up instructions. We hope you enjoy your new hammock stand and that it will give you many years of outdoor pleasure.

PARTS LIST:

A 2 curved end poles


B.... 2 straight poles

C.... 2 angled poles


D 2 "S" hooks

E.... Hammock

Assembly of the stand is generally easier with two people or with something to lean the stand against for temporary support.

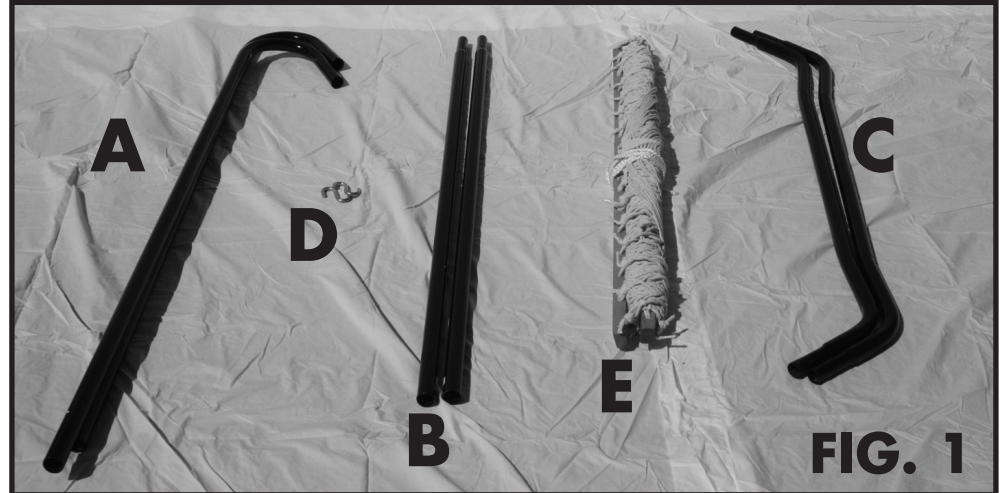

Remove all parts from the shipping carton and examine carefully for any signs of damage or missing parts. Read this instruction sheet in its entirety prior to assembly or use.

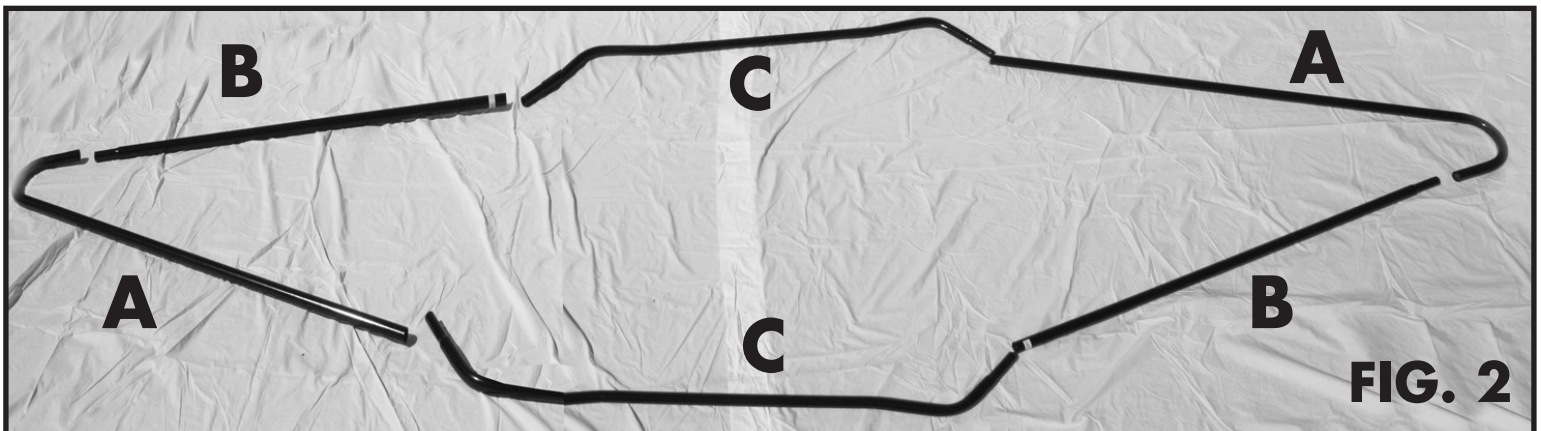

Step 1 - Place the parts on the ground in the manner indicated above. Be certain the stand is assembled and used on solid, level ground.

MAKE CERTAIN THAT EACH CONNECTION IS SECURELY AND COMPLETELY INSERTED INTO THE ADJOINING PART AFTER ASSEMBLY. INSPECT PRIOR TO EVERY USE OF YOUR HAMMOCK STAND, ESPECIALLY AFTER REMOVING OR INSTALLING YOUR HAMMOCK.


Step 2 - First, connect part B to part C and set aside. Then connect part A to remaining part C.

Lastly, connect part A to part B.

STEP 3 - Connect remaining part B to Part C. Then connect remaining part A to parts B and C.


STEP 4 - Insert S hooks (D) into holes located at the top of part A.

#5

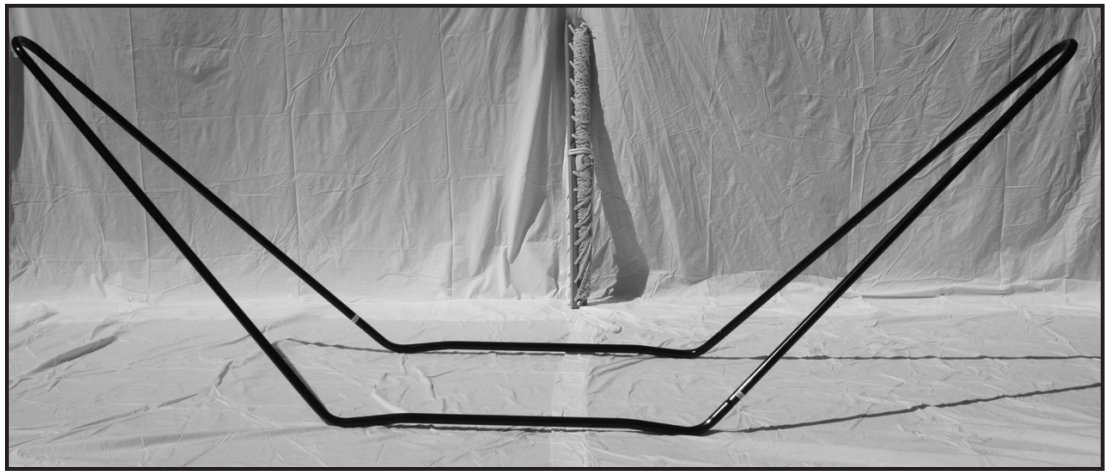

#6

#7

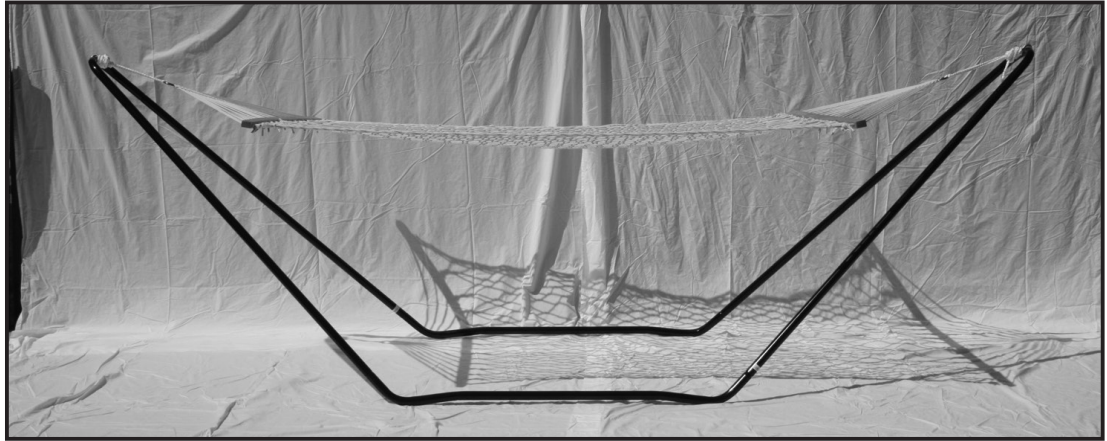

Step 5 - This is how your stand should look.

Step 6 - If your hammock comes with cotton-poly or nylon tie ropes you may tie these ropes to each of the "S" hooks as shown above. Be certain you have securely tied knots.

Once you have used your hammock, it may hang lower due to some stretching of the ropes. This is to be expected. To have the hammock hanging at the height originally chosen simple re-tie the knots at each "S" hook. Always inspect the knots prior to each use and adjust accordingly and make certain the hammock is hung securely and in safe condition.

STEP 7 - Now you may attach your hammock to the stand. Hook a link of rope over the "S" hook. You will have to adjust this later depending on how high you choose to hang your hammock.

MAINTENANCE

1. For best results and longer life, store your stand out of the weather to reduce possible rust problems.
2. BEFORE EACH USE, INSPECT ALL MOUNTING HARDWARE, STAND PARTS, POINTS OF CONNECTION AND YOUR HAMMOCK FOR INDICATIONS OF TEAR OR DEFECTS, REPLACE ALL WORN PARTS PRIOR TO USE OF YOUR STAND OR HAMMOCK.
3. Should the painted surface become scratched or chipped, obtain a matching paint and touch up spots where the underlying metal is exposed to inhibit rust.

CAUTIONS AND WARNINGS

DO NOT allow the connections (where one part inserts into another part) to become loose or less than totally inserted. Inspect prior to every use, to make certain that one part is fully inserted into the other part.

DO NOT EXCEED THE SUGGESTED WEIGHT LIMIT FOR YOUR HAMMOCK STAND

Questions: If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail info@texsport.com. This Department is open M-F from 8 a.m.-5 p.m. CST.