

IMPORTANT

Read this manual carefully before assembling, using or servicing this heater.
Keep this manual for future reference.

FOR YOUR SAFETY - IF YOU SMELL GAS

- Do not attempt to light the appliance.
- Extinguish any open flame.
- Disconnect from fuel supply.
- If smell persists leave the area.

! DANGER !

CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space can kill you.
- Never use this appliance in an enclosed space such as camper, tent, car or home.

! WARNING !

Misuse of this heater can lead to fire, explosion and serious
Personal injury to you or others. Follow all instructions provided.

CONTACT INFORMATION


If you should have any questions, problems or comments, please call our
Customer Service Department at 1-800-231-1402.
This Department is open from 8 AM-5 PM CST. M-F. www.texsport.com.

DANGER

NEVER USE THIS
APPLIANCE IN AN ENCLOSED
SPACE SUCH AS CAMPER, TENT,
CAR OR HOME.

USING IT IN AN ENCLOSED
SPACE CAN KILL YOU.

USE OUTDOORS
ONLY!

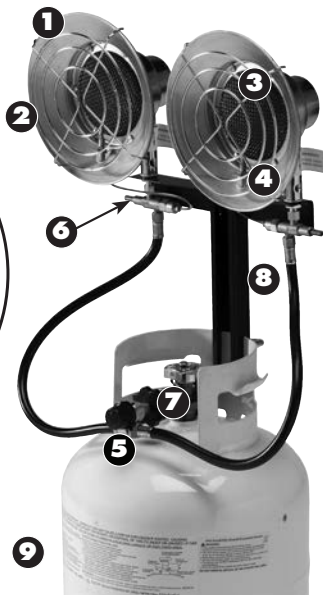

1. Steel Reflectors
2. Nickel plated grid
3. Heating element
4. Temperature sensor
5. Adjustable heat control valve
6. Gas release button
7. Valve (POL) adapter for propane bulk tank
8. Steel frame
9. Disposable propane bulk tank (not included)

Thank you for buying a Texsport Authentic Adventure Gear product. We hope you enjoy your new propane appliance and that it will serve you for many years to come. We encourage you to read and understand each step of the set-up and safety operation instructions prior to working with this propane appliance.

FOR OUTDOOR USE ONLY

GENERAL SAFETY INFORMATION

- NEVER use in an enclosed area.
- DO NOT use heater while sleeping.
- Always use heater in the upright position.
- Always use handle to move heater.
- DO NOT expose the propane tank to excessive heat.
- Never operate heater with missing or damaged parts or mantles.
- Always inspect heater, propane tank and connections for damage, debris or dirt before attaching the heater to the propane tank.
- Always attach/detach propane cylinder outdoors away from any open flame or pilot lights and only when the heater is cool.
- When storing or transporting heater, always disconnect the propane tank and store it in a cool, well ventilated location, in an upright position.
- Be sure connection to propane tank is tightly secure (hand tighten only) prior to each use.
- Never operate the heater near any flammable liquid or vapors. Keep all flammable or combustible materials beyond the clearance zone as indicated on the back panel of this booklet.
- Discontinue operation and close valve if:
 - ambient temperature drops below -10° F.
 - there is no fuel remaining in the propane cylinder
 - combustion becomes unstable
 - lighting cannot be performed quickly and easily
 - you experience repeated flame outs
- Never leave heater unattended when hot or in use.
- KEEP OUT OF REACH OF CHILDREN.

NOTE: AN IMPACT TO THE REGULATOR AREA COULD DAMAGE THE REGULATOR AND FAIL TO LIGHT CORRECTLY, RESULTING IN MELTING PARTS.

HEATER ASSEMBLY – ASSEMBLE OUTDOORS

- Step 1**Assemble steel frame with small nuts and bolts included.
- Step 2**Loosen tension bolt on the rear of the frame and slide frame onto bulk tank. Secure/lock frame into place with the tension bolt.
- Step 3**Use only propane bulk tanks approved for use by the United States Department of Transportation.
- Step 4**Remove plastic protector cap from valve adapter connection.
- Step 5**Make sure that the heater/control valve knob is turned off. Twist in a clockwise direction.
- Step 6**Make sure heater valve adapter rubber seal is clean and undamaged.

- Step 7.....Be certain the POL adapter is undamaged rubber seal is clean and undamaged.
- Step 8.....Screw POL adapter directly onto bulk tank fitting counter clockwise. (hand tighten only)
- Step 9.....Please check the connector for leaks using soapy water. Apply soapy water to the connection area. Leaking gas will produce bubbles.

***DO YOU SMELL GAS? IF YES, THERE IS A LEAK.
IS THE CONNECTION AREA EXTREMELY COLD?
IF SO, THERE IS A LEAK
DO NOT USE HEATER IF IT IS LEAKING.
WHEN YOU ARE SURE THERE ARE NO LEAKS,
YOU MAY PROCEED TO SETUP/LIGHTING YOUR HEATER.***

- Step 10.....When you are sure there are no leaks, you may proceed to setup/ lighting your heater.

SETUP/LIGHTING YOUR HEATER

- Step 1.....Open the valve to a low or medium setting. Twist in a counter clockwise direction.
- Step 2.....Place a flame source near the face of the burner and at the same time press the RED gas release button. Gas will begin to flow and the burner will ignite.
- Step 3.....Continue to press the RED starter button down for 60 Seconds to assure continuous gas flow.
- Step 4.....If heater fails to light, turn off the valve. Allow any gas to dissipate and repeat steps 1-3.
- Step 5.....If heater still does not light – contact Texsport Customer Service at 800-231-1402 8AM – 5PM CST Mon-Fri.

USING YOUR HEATER

- Step 1.....After burner has ignited, adjust valve to desired heat level.
- Step 2.....While ignited DO NOT touch the metal reflector or safety grid.
- Step 3.....Keep children, pets and flammable materials well away from ignited burner. See clearance zone diagram of this booklet.
- Step 4.....Handle only by grasping the propane bulk tank handle.
- Step 5.....Allow heater to cool for 15 minutes before storage.

MAINTENANCE


Be sure to keep equipment clean and make sure burner is always unobstructed. Propane appliances seldom require service as long as you keep valves and orifices away from dirt and dust. Always blow the valve clean before connecting it to a cylinder.

**IF DAMAGED DO NOT USE THE APPLIANCE AND CONTACT
TEXSPORT CUSTOMER SERVICE AT
1-800-231-1402 8AM TO 5PM CST MON-FRI.**

**DO NOT PERFORM MAINTENANCE WHILE THE
HEATER IS STILL HOT. PLEASE ALLOW
ADEQUATE TIME TO COOL.**

MINIMUM CLEARANCE TO FLAMMABLES OR COMBUSTIBLE

Please keep all combustible and/or flammable materials away from the heater at a minimum distance of 12" from the sides and 48" from above.

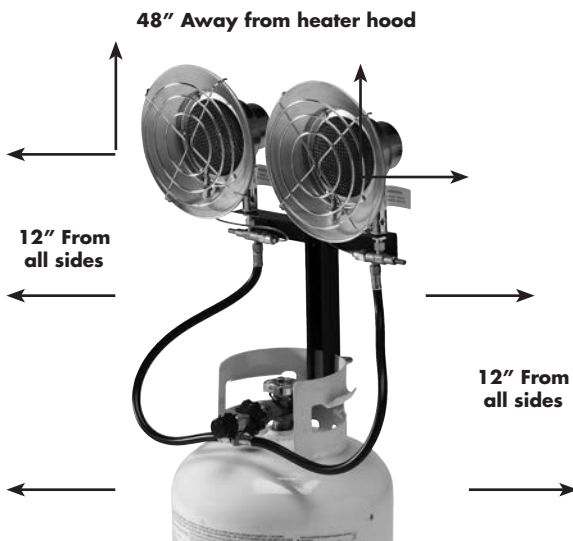

ONE YEAR LIMITED WARRANTY!

Texsport warrants to the original consumer purchaser that this heater is free from defects in materials and workmanship for a period of one (1) year from the date of purchase. All implied warranties relating to this product, including without limitation, the warranties of merchantability and fitness for a particular purchase, are also limited in duration to one (1) year from the date of purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty extends to the original consumer purchaser only and does not extend to subsequent purchasers or other transferees. This warranty does not cover damage for wear and tear, abuse, improper use or alteration and it is the sole express warranty relating to this product. Call the Texsport Consumer Relations Department at 1-800-231-1402, a sales receipt with date of original purchase is required and must accompany the return of the defective product. **THERE IS HEREBY EXCLUDED FROM THIS WARRANTY ANY LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT, PUNITIVE OR EXEMPLARY DAMAGES OR LOST PROFITS RESULTING FROM ANY BREACH OF THIS WARRANTY OR OTHERWISE.** Some states do not allow the exclusion may not apply to you. This warranty gives you specific legal right, and you may also have other rights which vary from state to state.

#14221

NOTE: THIS IS NOT A WARRANTY REGISTRATION CARD