

IMPORTANT

Read this manual carefully before assembling, using or servicing this stove.
KEEP THIS MANUAL FOR FUTURE REFERENCE.

FOR YOUR SAFETY - IF YOU SMELL GAS

- Do not attempt to light the appliance.
- Disconnect from fuel supply.
- Extinguish any open flame.
- If smell persists leave the area.

FOR YOUR SAFETY

NOTE: DO NOT STORE OR USE GASOLINE OR OTHER LIQUID WITH FLAMMABLE VAPORS IN THE VICINITY OF THIS OR ANY OTHER APPLIANCE.

⚠ DANGER ⚠

CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space can kill you.
- Never use this appliance in an enclosed space such as camper, tent, car or home.

⚠ WARNING ⚠

Misuse of this appliance can lead to fire, explosion and serious personal injury to you or others. **Follow all instructions provided.**

CONTACT INFORMATION

If you should have any questions, problems or comments, please call our Customer Service Department at **1-800-231-1402**. This Department is open from **8 AM-5 PM CST. M-F.** www.texsport.com.

DANGER

NEVER USE THIS APPLIANCE IN AN ENCLOSED SPACE SUCH AS CAMPER, TENT, CAR OR HOME.

USING IT IN AN ENCLOSED SPACE CAN KILL YOU.

USE OUTDOORS ONLY!



1. Wind shields

2. Cover

3. Control Knobs

4. Burner

5. Grill

6. Igniter Switch

Thank you for buying a Texsport Authentic Adventure Gear product. We hope you enjoy your new propane appliance and that it will serve you for many years to come. We encourage you to read and understand each step of the set-up and safety operation instructions prior to working with this propane appliance.

FOR OUTDOOR USE ONLY

GENERAL SAFETY INFORMATION

- NEVER use in an enclosed area.
- DO NOT use stove while sleeping.
- Always use stove in the upright position.
- DO NOT expose the propane cylinder to excessive heat.
- Always inspect stove, propane cylinder and connections for damage, debris or dirt before attaching the stove to the propane cylinder.
- DO NOT USE AS A SPACE HEATER.
- Always attach/detach propane cylinder outdoors away from any open flame or pilot lights and only when the stove is cool.
- When storing or transporting stove, always disconnect the propane cylinder and store it in a cool, well ventilated location, in an upright position.
- Be sure connection to propane cylinder is tightly secure (hand tighten only) prior to each use.
- Never operate the stove near any flammable liquid or vapors. Keep all flammable or combustible materials beyond the clearance zone as indicated on the back panel of this booklet.
- Discontinue operation and close valve if:
 - ambient temperature drops below -10° F.
 - there is no fuel remaining in the propane cylinder
 - combustion becomes unstable
 - lighting cannot be performed quickly and easily
 - you experience repeated flame outs
- Should blockage occur in the fuel jet, do not attempt to clear with a metal object. Call Texsport Customer Service at 1-800-231-1402 — 8AM – 5PM CST Mon-Fri.
- Never leave stove unattended when hot or in use.
- KEEP OUT OF REACH OF CHILDREN.

CONNECTING THE FUEL SOURCE – ASSEMBLE OUTDOORS

Step 1Only use the approved 16.4 oz/465 g disposable propane cylinder approved for use by the United States Department of Transportation DOT-NRC 232/290 M1110.

- Step 2.....Make sure that the burner control valve knobs is turned off. Twist in a clockwise direction
- Step 3.....Make sure regulator assembly rubber seal is clean and undamaged and in its proper centered position.
- Step 4.....Attach the propane cylinder onto the regulator assembly (hand tighten only). Insert tube into the inlet housing on the right side of the stove. Insert the tube fully into the inlet and turn the collar clockwise to tighten. (When installed correctly the propane cylinder and regulator and tube assembly will slant slightly toward you. The propane cylinder does not rest flat on the surface).
- Step 5.....Please check all connections for leaks using soapy water. Bubbles will form if there is a leak present.
- Step 6.....When you are sure there are no leaks, you may proceed to setup/lighting your stove.

**DO YOU SMELL GAS? IF YES, THERE IS A LEAK.
IS THE CONNECTION AREA EXTREMELY COLD?
IF SO, THERE IS A LEAK
DO NOT USE STOVE IF IT IS LEAKING.
WHEN YOU ARE SURE THERE ARE NO LEAKS,
YOU MAY PROCEED TO SETUP/LIGHTING YOUR STOVE.**

SETUP/LIGHTING YOUR STOVE

- Step 1Open case cover assembly and position two side windshields by inserting notched supports into the cover.
- Step 2.....Turn the burner control valve knob counter clockwise to a low or medium setting. Gas will begin to flow and now press the ignition button repeatedly until burner lights.
- Step 3.....If stove fails to light, turn off the valve. Allow any gas to dissipate and check for a fuel blockage while following all the safety instructions listed.
- Step 4.....Repeat above instructions for lighting grill.

USING YOUR STOVE

- Step 1After burner has ignited, adjust to desired heat level.
- Step 2.....While ignited DO NOT touch the cooking area. Only the control knob should be touched during operation.
- Step 3.....Stove surface is very hot and should not be handled or moved, except after being shut down.
- Step 4.....Allow stove to cool for 15 minutes before moving or storage.

MAINTENANCE

Be sure to keep equipment clean and make sure burner is always unobstructed. Propane appliances seldom require service as long as you keep valves and orifices away from dirt and dust. Always blow the valve clean before connecting it to a cylinder. If damaged DO NOT use the appliance and contact Texsport Customer Service @ 800-231-1402 8AM to 5PM CST Mon-Fri.

DO NOT PERFORM MAINTENANCE WHILE THE STOVE IS STILL HOT. PLEASE ALLOW ADEQUATE TIME TO COOL.

MINIMUM CLEARANCE TO FLAMMABLES OR COMBUSTIBLES

Please keep all combustible and/or flammable materials away from the stove at a minimum distance of 12" from the sides and 48" from above.



ONE YEAR LIMITED WARRANTY!

Texsport warrants to the original consumer purchaser that this stove is free from defects in materials and workmanship for a period of one (1) year from the date of purchase. All implied warranties relating to this product, including without limitation, the warranties of merchantability and fitness for a particular purchase, are also limited in duration to one (1) year from the date of purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty extends to the original consumer purchaser only and does not extend to subsequent purchasers or other transferees. This warranty does not cover damage for wear and tear, abuse, improper use or alteration and it is the sole express warranty relating to this product. Call the Texsport Consumer Relations Department at 1-800-231-1402, a sales receipt with date of original purchase is required and must accompany the return of the defective product. **THERE IS HEREBY EXCLUDED FROM THIS WARRANTY ANY LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT, PUNITIVE OR EXEMPLARY DAMAGES OR LOST PROFITS RESULTING FROM ANY BREACH OF THIS WARRANTY OR OTHERWISE.** Some states do not allow the exclusion may not apply to you. This warranty gives you specific legal right, and you may also have other rights which vary from state to state.

#14228

NOTE: THIS IS NOT A WARRANTY REGISTRATION CARD