

# INSTRUCTIONS


## Item 15108 - Tripod Grill

Thank you for purchasing this Texsport tripod grill. Please read and understand each step of the set-up instructions. We encourage you to set-up this tripod grill at least once prior to your camping trip, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new tripod grill and that it will give you many years of camping pleasure.

**Do not apply excessive force to this product.**

### PARTS LIST:

- A .....3-Shock-corded leg poles**
- B .....1-Triangular support chain**
- C .....1-Adjustable lever**
- D .....1-Primary support chain**
- E .....1-Circular grill**

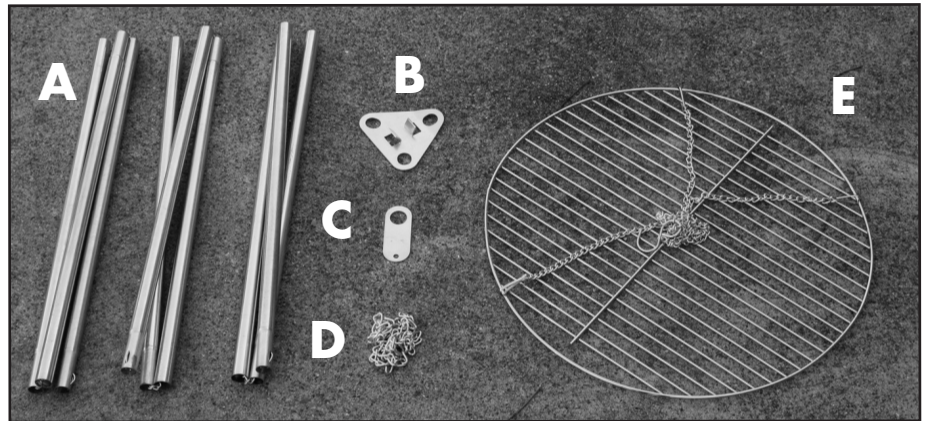

**STEP 1 - Assemble the 3 shock-corded leg poles. Slide adjusting lever over the tapered end of 1 leg pole.**



**STEP 2 - Insert the 3 leg poles into the triangular support plate. The flat surface of the triangular support plate faces up.**




**STEP 3 - Feed the primary support chain through the triangular support plate openings.**



**STEP 4 - Hook the small "S" hook into the adjusting lever as shown above.**



**STEP 5 - This is how your grill should look.**

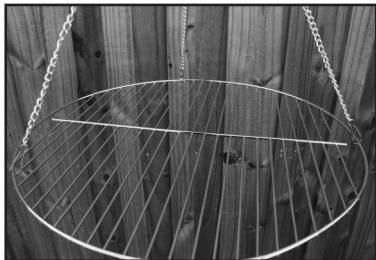

**STEP 6 - The three support chains, which have been pre-assembled, should now be attached at equal distances around the grill using the convenient snap clips.**



**STEP 6 - Hook the "S" hook to the primary support chain.**

**This tripod grill can be used as a lantern hanger by removing the grill assembly and hanging a lantern using the bail handle.**

### QUESTIONS:

If you should have any questions, problems or comments, please call our Customer Service Department at **1-800-231-1402** or e-mail **info@texsport.com**. This Department is open M-F from 8 a.m.-5 p.m. CST.