

IMPORTANT

Read this manual carefully before assembling, using or servicing this lantern.
Keep this manual for future reference.

FOR YOUR SAFETY - IF YOU SMELL GAS

- Do not attempt to light the appliance.
- Extinguish any open flame.
- Disconnect from fuel supply.
- If smell persists leave the area.

! DANGER !

CARBON MONOXIDE HAZARD

- This appliance can produce carbon monoxide which has no odor.
- Using it in an enclosed space can kill you.
- Never use this appliance in an enclosed space such as camper, tent, car or home.

! WARNING !

Misuse of this lantern can lead to fire, explosion and serious Personal injury to you or others. Follow all instructions provided.

CONTACT INFORMATION

If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402.
This Department is open from 8 AM-5 PM CST. M-F. www.texsport.com.

DANGER

NEVER USE THIS APPLIANCE IN AN ENCLOSED SPACE SUCH AS CAMPER, TENT, CAR OR HOME.

USING IT IN AN ENCLOSED SPACE CAN KILL YOU.

USE OUTDOORS ONLY!



1. Hood
2. Glass globe
3. Handle
4. Fuel valve knob
5. Valve Adapter
6. Burner tube assembly
7. Mantle
8. Burner base
9. Fuel jet
10. Plastic base
11. Disposable propane cylinder (not included)

Thank you for buying a Texsport Authentic Adventure Gear product. We hope you enjoy your new propane appliance and that it will serve you for many years to come. We encourage you to read and understand each step of the set-up and safety operation instructions prior to working with this propane appliance.

FOR OUTDOOR USE ONLY

GENERAL SAFETY INFORMATION

- NEVER use in an enclosed area.
- DO NOT use lantern while sleeping.
- Always use lantern in the upright position.
- Always use handle to move lantern.
- DO NOT expose the propane cylinder to excessive heat.
- Always return handle to “down” position after lighting or moving. If handle is left in the “up” position during operation it will become very hot and should not be touched for at least 15 minutes after shut off.
- Never operate lantern with missing or damaged parts or mantles.
- Always inspect lantern, propane cylinder and connections for damage, debris or dirt before attaching the lantern to the propane cylinder.
- DO NOT USE AS A SPACE HEATER.
- Always attach/detach propane cylinder outdoors away from any open flame or pilot lights and only when the lantern is cool.
- When storing or transporting lantern, always disconnect the propane cylinder and store it in a cool, well ventilated location, in an upright position.
- Be sure connection to propane cylinder is tightly secure (hand tighten only) prior to each use.
- Never operate the lantern near any flammable liquid or vapors. Keep all flammable or combustible materials beyond the clearance zone as indicated on the back panel of this booklet.
- Discontinue operation and close valve if:
 - ambient temperature drops below -10° F.
 - there is no fuel remaining in the propane cylinder
 - combustion becomes unstable
 - lighting cannot be performed quickly and easily
 - you experience repeated flame outs
- Never leave lantern unattended when hot or in use.
- KEEP OUT OF REACH OF CHILDREN.

LANTERN ASSEMBLY – ASSEMBLE OUTDOORS

- Step 1** Unpack lantern. Dispose of all packing material. Carefully compare contents to **Illustration 1**.
- Step 2** Unfold paddle feet for additional stability. **Illustration 2**. Place the 16.4 oz/465 g disposable propane cylinder, approved for use by the United States Department of Transportation DOT-NRC 232/290 M1110, propane cylinder into the plastic base.
- Step 3** Turn fuel valve to OFF position by twisting clockwise fully. **Illustration 3**.
- Step 4** Make sure valve adapter rubber seal is clean and undamaged. Be certain the POL adapter is undamaged and in its proper centered position.
- Step 5** Remove the protective cap from the propane cylinder. Keep this cap for use when storing the cylinder for future use.
- Step 6** Carefully screw the propane cylinder onto the lantern. DO NOT cross thread. Hand Tighten Only – DO NOT use any tools. **Illustration 4**.



Illustration 1



Illustration 2

TEST THE CONNECTION FOR LEAKING GAS BY:

Step 7Applying soapy water to the connection area. Leaking gas will produce bubbles. Illustration 5.

Do you smell gas? If yes, there is a leak. Is the connection area extremely cold? If so, there is a leak!

DO NOT USE LANTERN IF IT IS LEAKING!

When you are sure there are no leaks, you may proceed to setup/lighting your lantern.



Illustration 3

ATTACHING THE MANTLE(S)

Step 1Using the drawstring, tie the top of the new mantle securely around the lip of the burner tube. The flat side of the mantle should hang next to the vertical section of the burner tube. Illustration 6.

Step 2Trim off any excess string. Illustration 7.

Step 3Be careful not to damage the mantle during installation. DO NOT operate lantern with a hole in the mantle.



Illustration 4

PRIMING THE MANTLE(S)

Step 1Hold a flame source to the bottom of the attached mantle. Allow the mantle to ignite and burn evenly until only a white ash remains. It will burn out by itself. Illustration 8.

Step 2This process will reduce the mantle in size and it will cause it to turn a gray/white color.

Step 3This process will take 2 to 3 minutes.

Step 4The mantle(s) will now be very fragile. After priming DO NOT touch the mantle.

Step 5Always have extra mantles available for replacement. NEVER operate with defective mantles. A mantle with a hole or other defect can cause the lantern to overheat.



Illustration 5

INSTALL THE GLASS GLOBE & HANDLE

Step 1Place glass globe over the mantle and burner tube.

Step 2Attach the hood securely with the round nut, being careful to align the hole in each side of the hood with the corresponding hole on the burner tube frame. Illustration 9.

Step 3Install the bail handle – passing the ends through the hood and burner tube frame.



Illustration 6

LIGHTING THE LANTERN

Step 1When lantern is completely assembled and free of any gas leaks, position lantern on a flat stable surface.

Step 2Keeping your head and body well away, insert flame source through lighting hole near to the mantle. Open fuel valve turning counter clockwise. The mantle will light. Illustration 10.

Step 3Adjust the brightness as desired with the fuel valve.



Illustration 7

Note: Please wait a few minutes before moving the lit lantern. Move lantern using the bail handle.

TURNING OFF THE LANTERN

Step 1Turn fuel valve to OFF position by turning fully clockwise. Illustration 11.

Step 2Allow lantern to completely cool (approx. 15 minutes) before touching it.



Illustration 8

MAINTENANCE

Be sure to keep equipment clean and make sure burner is always unobstructed. Propane appliances seldom require service as long as you keep valves and orifices away from dirt and dust. Always blow the valve clean before connecting it to a cylinder.

**IF DAMAGED DO NOT USE THE APPLIANCE AND CONTACT
TEXSPORT CUSTOMER SERVICE AT
1-800-231-1402 8AM TO 5PM CST MON-FRI.**

**DO NOT PERFORM MAINTENANCE WHILE THE
LANTERN IS STILL HOT. PLEASE ALLOW
ADEQUATE TIME TO COOL.**

MINIMUM CLEARANCE TO FLAMMABLES OR COMBUSTIBLE

Please keep all combustible and/or flammable materials away from the lantern at a minimum distance of 12" from the sides and 48" from above.



Illustration 9



Illustration 10



Illustration 11

ONE YEAR LIMITED WARRANTY!

Texsport warrants to the original consumer purchaser that this lantern is free from defects in materials and workmanship for a period of one (1) year from the date of purchase. All implied warranties relating to this product, including without limitation, the warranties or merchantability and fitness for a particular purchase, are also limited in duration to one (1) year from the date of purchase. Some states do not allow limitations on how long an implied warranty lasts, so the above limitations may not apply to you. This warranty extends to the original consumer purchaser only and does not extend to subsequent purchasers or other transferees. This warranty does not cover damage for wear and tear, abuse, improper use or alteration and it is the sole express warranty relating to this product. Call the Texsport Consumer Relations Department at 1-800-231-1402, a sales receipt with date of original purchase is required and must accompany the return of the defective product. THERE IS HEREBY EXCLUDED FROM THIS WARRANTY ANY LIABILITY FOR INCIDENTAL, CONSEQUENTIAL, SPECIAL, INDIRECT, PUNITIVE OR EXEMPLARY DAMAGES OR LOST PROFITS RESULTING FROM ANY BREACH OF THIS WARRANTY OR OTHERWISE. Some states do not allow the exclusion may not apply to you. This warranty gives you specific legal right, and you may also have other rights which vary from state to state.

#14201

NOTE: THIS IS NOT A WARRANTY REGISTRATION CARD