



INSTRUCTIONS

#15908 - Rechargeable/Solar Camping

Lantern/Flashlight

Thank you for buying a Texsport Authentic Adventure Gear Product. We hope you enjoy your new lantern and that it will serve you with many years of camping pleasure. We encourage you to read and understand each step of the set-up instructions prior to working with the lantern.



In The Box:

- Lantern
- Rechargeable Battery Pack
- USB Power Cord

NOTE:

- Rechargeable battery pack will be installed inside the lantern.
- Lantern will come with a small charge. You must fully charge for 6-8 hours.

Operating your lantern:

1. Fully extend lantern by holding the base and pulling up on the top. This activates the White LED Lantern setting.
2. Compress lantern to turn off.
3. Fully extend lantern by holding the base and pulling up on the top. This activates the second setting - Flame mode.
4. Compress lantern to turn off.

Charging your lantern by USB:

1. Turn off lantern.
2. Plug the Micro USB into the lantern.
3. Plug the USB in to a USB Port (pc or laptop) USB adapter, or Auto USB Charger.
4. Charge for 6-8 hours.

NOTE: Red LED light will turn on. Once LED turns Green, it is fully charged.

Operating the flashlight:

1. Press the power button to turn the flashlight on and off.

NOTE:

Handle can easily be switched from top to side for easy carrying.

Charging your lantern by Solar Panel:

1. Turn off lantern.
2. Place the lantern in full sunlight.
3. Charge for 6-8 hours.

NOTE: Red LED light will turn on. Once LED turns Green, it is fully charged.

****Best to move handle to the side position for more solar panel exposure.**