



INSTRUCTIONS

#15909 - Remote Control Camping

Tent Lantern

Thank you for buying a Texsport Authentic Adventure Gear Product. We hope you enjoy your new lantern and that it will serve you with many years of camping pleasure. We encourage you to read and understand each step of the set-up instructions prior to working with the lantern.



In The Box:

- **Lantern**
- **Remote Control**
- **Batteries**

NOTE:

- **Remote control has a pre-installed battery.**

Installing/Replacing Batteries:

1. **On back of lantern, remove battery case cover.**
2. **Insert batteries following the "positive" "negative" template markings on the battery slots.**
3. **Replace battery case cover.**

Lantern Function Modes:

Manual Operation:

1. **Press the POWER ON button to turn on and off ALL LIGHTS.**

Remote Control Operation:

1. **Press the POWER ON button to turn on all the lights, with remote in hand,**
 - **press the remote button ONCE to turn OFF the 20 LED lights.**
 - **press the remote button TWICE to turn ON the 20 LED lights.**
 - **press the remote button THREE TIME to turn OFF all lights.**
 - **press the remote button FOUR TIMES to turn ON center spot light.**

Now you can toggle through the above setting using just the remote control.

NOTE: To fully turn off the lantern, you must push the POWER ON button again. The remote will not longer work.

Questions: If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail info@texsport.com. This Department is open M-F from 8 a.m.-5 p.m. CST.