




# ASSEMBLY INSTRUCTIONS

## Item 15982 U-Tube Floating Lantern

Thank you for buying a Texsport Authentic Adventure Gear Product. We hope you enjoy your new lantern and that it will serve you with many years of camping pleasure. We encourage you to read and understand each step of the set-up instructions prior to working with the lantern.


**Do not apply excessive force to this product.**

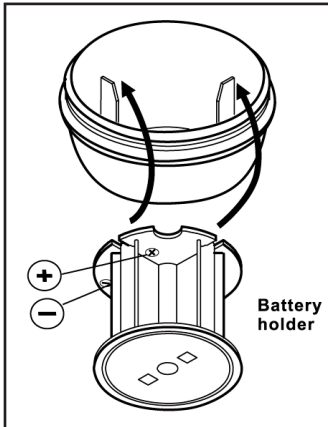

### BATTERY INSTALLATION:

**THIS LANTERN IS POWERED BY 4 "D" CELL BATTERIES**

- STEP 1 - Turn lantern off**
- STEP 2 - Unscrew base cover and remove battery holder from the body of the lantern.**
- STEP 3 - Insert 4 new batteries according to the mark on the battery holder +/-**
- Step 4 - Slide battery holder back into the body of the lantern. It will only fit one way to ensure battery contact.**
- STEP 5 - Screw on base cover.**

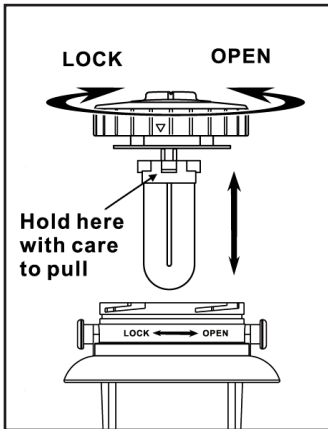

### TUBE REPLACEMENT:

**THIS LANTERN USES 7W "U" SHAPE LAMP TUBE.**

- STEP 1 - Turn lantern off**
- STEP 2 - Twist the top cover counter-clockwise and lift up to open.**
- STEP 3 - Turn the top cover upside down and remove U-tube from holder by pulling it with care. Hold U-tube where indicated on diagram.**
- Step 4 - Insert new 7W "U" shape lamp tube into socket.**
- STEP 5 - Reassemble the top cover and twist clockwise to secure.**

### QUESTIONS:

If you should have any questions, problems or comments, please call our Customer Service Department at **1-800-231-1402**. This Department is open M-F from 8 a.m.-5 p.m. CST. [www.texsport.com](http://www.texsport.com)