



OPERATING INSTRUCTIONS:

#66818 • LED Lantern/Flashlight

Lantern Mode:

Turn globe counter clock-wise to unlock. Pull up globe and turn clock-wise to lock.

Flashlight Mode:

To engage flashlight mode, place globe in lantern position. Turn globe counter clock-wise and pull upward to remove.

QUESTIONS:

If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail info@texsport.com. This Department is open M-F from 8 a.m.-5 p.m. CST.