

INSTRUCTIONS



#23122 - Two Way Electric Rechargeable Air Pump

Thank you for buying a Texsport Authentic Adventure Gear Product. We hope you enjoy your new pump and that it will serve you with many years of camping pleasure. We encourage you to read and understand each step prior to working with the pump.

IMPORTANT:

- 1 This unit must be recharged by a 120V AC wall socket or by a car power port.**
- 2 Allow to fully discharge before recharging. NOTE: when the pump is not fully discharged, it will shorten its battery life.**
- 3 This is a high-volume, low-pressure pump. It is intended to inflate items such as air mattresses and inflatable toys, etc. Use for pneumatic items such as tires or inflatable sport balls is not recommended.**
- 4 This item contains Nickel Cadmium. Please check local regulations for proper disposal.**

WARNING:

- 1 Carefully follow instructions on article to be inflated. Never exceed recommended pressures. Bursting items can cause serious injury.**
- 2 Never leave pump unattended while in use**
- 3 Do not use under wet conditions.**
- 4 Do not allow debris to get sucked into the inflation or deflation ports.**
- 5 Never look into or point the "inflate" opening toward your eyes while pump is use.**
- 6 Do not attempt to put hand or fingers into the "inflate" or "deflate" port at any time.**

CAUTION: TO REDUCE THE RISK OF ELECTRIC SHOCK, DO NOT EXPOSE TO MOISTURE. STORE INDOORS.

TO CHARGE:

- 1 For AC Adapter: Turn the switch to the OFF "o" position. Connect the AC adapter to the pump and to the wall outlet.**
- 2 For Car Charger: Turn the switch to the "OFF" "--" position. Connect the DC adapter to the pump and to the power port.**
- 3 Charge the pump for 12 hours prior to initial use. Charge the pump 8 hours prior to use thereafter.**
- 4 Do not charge the DC pump when car is working.**

TO INFLATE:

- 1 Open valve/stopper on inflatable item.**
- 2 Attach one of the three adapters to the "inflate" end of the pump.**
- 3 Insert pump into inflatable and turn pump on by moving switch to the ON "-" position. To turn pump off, move the switch to the OFF "o" position.**
- 4 When fully inflated, remove pump and close valve/stopper on inflatable item.**

To Deflate:

- 1 Remove adapter from "inflate" end and attach to the "deflate" end of the pump. Repeat same steps as inflating.**

Questions: If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail info@texsport.com. This Department is open M-F from 8 a.m.-5 p.m. CST.