



# ASSEMBLY INSTRUCTIONS

## #01337 Wild River Two-Room Cabin Tent


Thank you for purchasing this Texsport /First Gear tent. Please read and understand each step of the set-up instructions. We encourage you to set-up this tent at least once prior to your camping trip, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new tent and that it will give you many years of camping pleasure.

**Do not apply excessive force to this product.**

### PARTS LIST:

- A ..... Tent skin
- B..... 2 Diagonal roof poles
- C..... 1 Front to rear roof pole
- D ..... 1 Fly pole
- E..... 2 Front & rear leg poles
- F..... 4 Leg poles
- G ..... Stakes, guy ropes and clews

**NOTE:** Prepare your camp site by removing all sharp stones, twigs, etc. The site should be flat and have no depressions that could collect rain water.

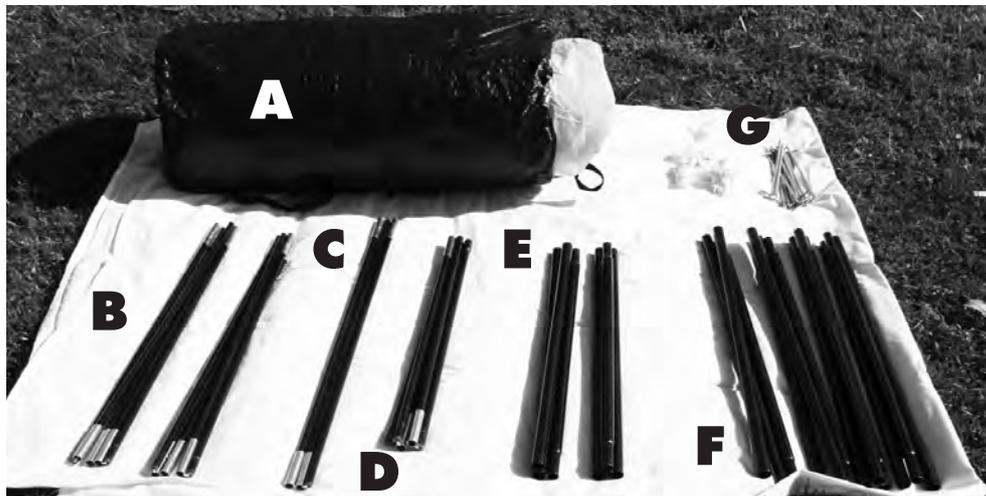

**Step 1 - Spread out tent skin.**



**Step 2 - Assemble the roof poles (B & C) and insert into the small opening of the molded joints.**



**Step 3 - Your poles should form double star as shown above. Tie at the center to secure poles.**



**Step 4 - Secure skin by snapping all speed clips onto roof poles.**



**Step 5 - Assemble the 2 front and rear leg poles and insert into the molded pole joint. Repeat with the other 4 remaining leg poles**



**Step 6 - Insert the pin into the bottom of the leg poles.**



**Step 7 - Stake down at the ring and all tabs around tent.**



**Step 8 - This is what your tent should look like at this point.**



**Step 9 - Tie skin to leg poles to secure.**



**Step 10 - Assemble the fly pole (D) and insert into fly webbed pocket.**



**Step 11 - Secure pole to fly with attached ties.**



**Step 12 - Drape assembled fly over tent. Secure fly to tent with attached buckles. Pull or loosen web straps to adjust tension.**




**Step 13 - Secure fly to tent with velcro.**



**Step 14 - This is how your built tent should look.**



**Step 15 - It is recommended in windy weather to secure your tent with guy ropes. Insert the guy rope into clew as shown above.**

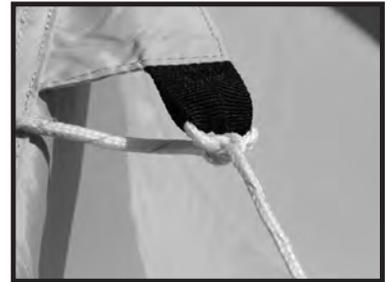

**Step 16 - Tie the other end of the guy rope to the tabs on the fly.**



**Step 17 - Loosen the guy rope as shown to wrap around a stake.**



**Step 18 - Stake down the guy rope.**



**Step 19 - Adjust the tension on the guy rope by sliding the clew up or down.**

**WARNING:** Texsport tent fabrics are flame retardant treated per C.P.A.I.-84 specification. However, for your safety, we recommend that NO OPEN FLAME BE USED IN OR NEAR YOUR TENT.

**SOME ADDITIONAL INFORMATION:** Always secure your tent (with the tent stakes included). Stake one corner, then stake each consecutive corner in a clockwise rotation. Make sure the tent remains tight. Always place your tent a safe distance from your campfire - unstaked tent placed upwind of the fire can be blown into the fire. Tent placed downwind of the fire are often showered with tiny sparks that can burn holes into the lightweight fabrics of your tent.

**WATERPROOFING YOUR TENT:** Texsport tents are made from coated water-repellent fabrics. However, the sewing process, necessary in all tent fabrication, can cause water leakage where the sewing needles have perforated the fabric in the seams. Without treatment the tent will leak. Every new tent needs to be seam sealed to make it water tight. We recommend using Texsport Spray Waterproofing/Seam Sealer which may be found at your local outdoor outfitter or camping store. DO NOT APPLY SEAM SEALER TO ZIPPERS.

**STAKES:** All tents should be staked down. The stakes supplied with your tent are effective for most conditions; however, specialized stakes are recommended in certain cases:

- a. Sand Stakes: ..... Long broad stakes designed to hold in loose sand.
- b. Steel Stakes: ..... Most effective in hard, rocky or frozen soil. These can rust and their sharp edges could damage the tent if stored with the tent. In extremely hard soil a steel rod can be used to make the starter hole.
- c. Skewer Stakes: ..... Lightweight, but less holding power than the standard stakes.
- d. Snow Stakes: ..... The most common method is to bury objects with a great deal of surface area in the snow i.e. branches, aluminum pie plates, stuff sacks or tent bags filled with snow and buried: (this may be referred to as the dead man method). Tents can also be secured to snow skis or poles which are stuck into the snow.

**ZIPPERS:** If zippers stick, lubricate with silicone. Never force a zipper which has material caught in it as this will bend the slider and prevent the zipper from closing. Continual use in a sandy environment can cause the slider to erode and fail to close the zipper.

**STORAGE:** Tents should be stored dry and loosely folded away from heat and water. Keep out of reach of mice as they like to nest in tents. Never store directly on concrete as moisture and chemicals in concrete may damage the nylon.

**WASHING:** Hand wash with a sponge using a mild soap. Never use detergents or washing machines as they may damage the coating or seams. Remember to use seam sealer once tent has been washed to insure waterproofing.

**HOW LONG WILL A NYLON TENT LAST?** Various conditions will affect the length of service which you receive:

- a. A nylon tent which is left erected all summer may last only one or two seasons as the sun's ultra-violet rays damage the nylon.
- b. Never store a tent wet or damp as mildew may develop. It will not harm nylon, however, mildew is unsightly and may damage other parts of the tent (i.e. zipper tapes)
- c. Avoid spraying insect repellent or hair sprays, etc. on tent fabric as they may be harmful.

**REPAIR:** For small tears use an adhesive backed rip-stop nylon patch. We recommend Texsport Nylon Tent Repair Kit (#14113) which may be found at your local outdoor outfitter or camping store.

**QUESTIONS:** If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail [info@texsport.com](mailto:info@texsport.com). This Department is open M-F from 8 a.m.-5 p.m. CST.