



Authentic Adventure Gear®


INSTRUCTIONS

Item 01402

Highland Three-Room Cabin Tent

Thank you for purchasing this Texsport tent. Please read and understand each step of the set-up instructions. We encourage you to set-up this tent at least once prior to your camping trip, ensuring that you have a satisfactory understanding of the set-up process. We hope you enjoy your new tent and that it will give you many years of camping pleasure.

Do not apply excessive force to this product.

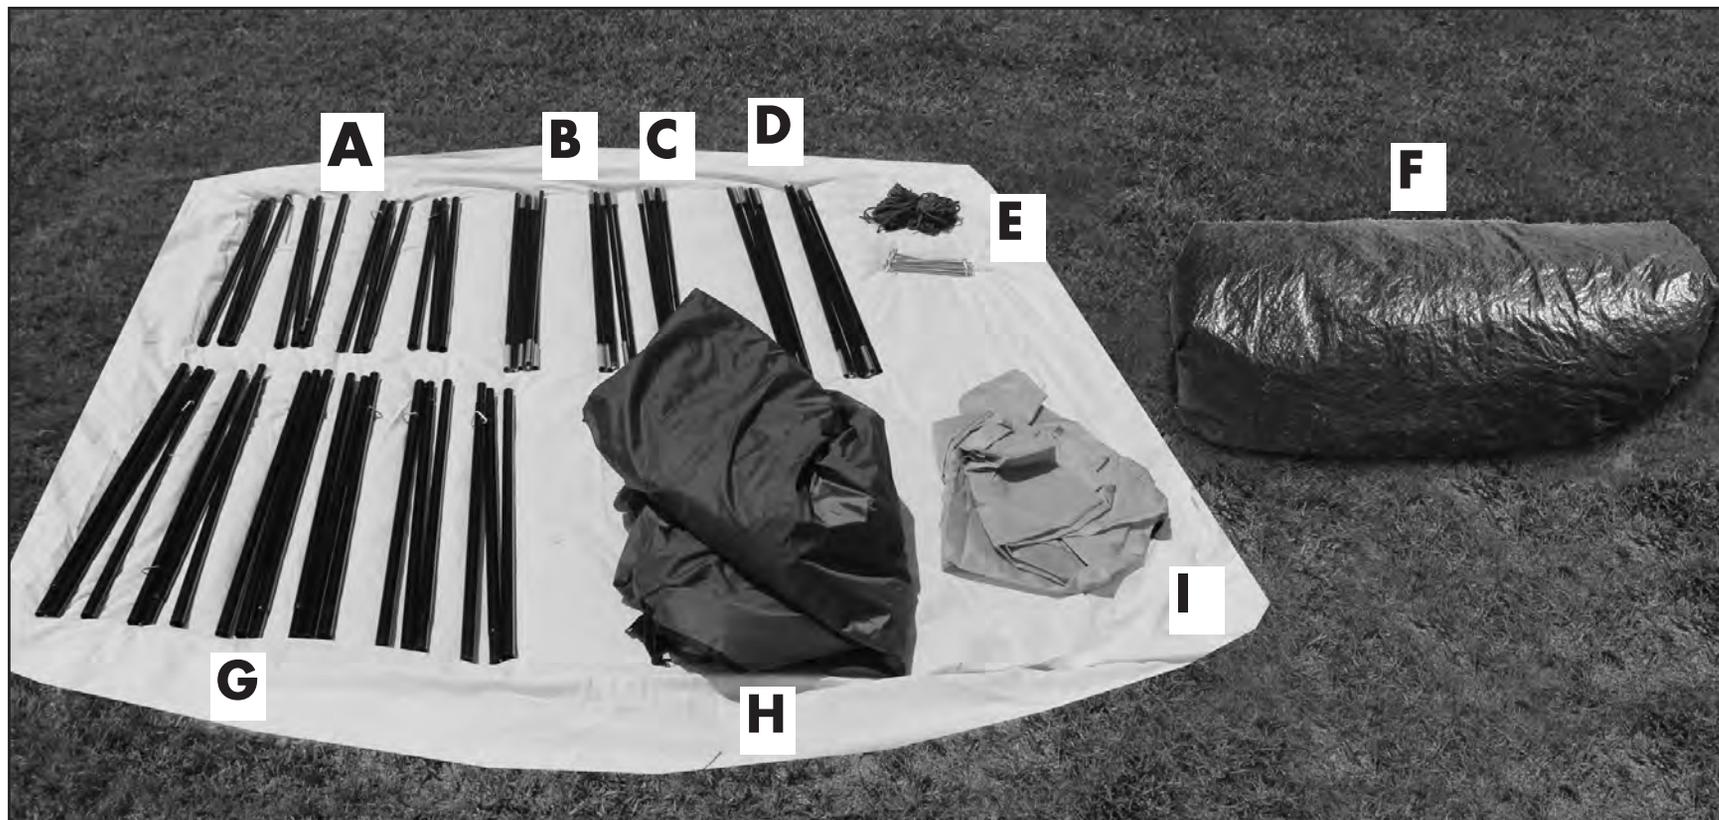

PARTS LIST:

A4 Front & rear steel leg poles

B2 GRAY tip fiberglass roof poles

C1 ORANGE tip fiberglass roof pole

D2 BLACK tip fiberglass roof poles

EStakes, guy ropes and clews

FTent skin

G6 Side steel leg poles

HTent Fly

IRemovable room divider

NOTE:

Prepare your camp site by removing all sharp stones,



STEP 1 - Spread out tent skin.



STEP 2 - Assemble the roof poles B with the GRAY tips and insert into the GRAY sleeve on the outer side to side of the tent skin.



STEP 3 - Insert pole into the grooved section of the molded corner joint.



STEP 4 - Assemble the roof pole C with the ORANGE tips and insert into the center ORANGE sleeve on the tent skin.



STEP 5 - Insert pole into the grooved section of the molded corner joint.



STEP 6 - Assemble the roof poles D with the BLACK tips and insert into the BLACK sleeve on the front to rear of the tent skin.



STEP 7 - Insert pole into the grooved section of the molded corner joint.



STEP 8 - This is how your built tent roof should look.



STEP 9 - Assemble the 4 front and rear leg poles A and place them next to the black tip roof poles. Assemble the 6 side leg poles G and place them at the gray and orange roof poles.



STEP 10 - With a assistance from a friend, insert the leg poles into the molded corner joint. Make sure the fly ring is at the top.



STEP 11 - This is how your built tent should look.



STEP 12 - To secure the tent, speed clip the skin to the pools.



STEP 13 - Insert the pin into the bottom of the leg poles.



STEP 14 - Stake down at all the rings.



STEP 15 - Drape fly over tent and hook onto the fly rings on the leg poles.



STEP 16 - Secure fly with velcro.



STEP 17 - Stake out the vent ports.



STEP 18 - It is recommended in windy weather to secure your tent with guy ropes. Insert the guy rope into clew as shown above.



STEP 20 - Tie the other end of the guy rope to the tabs on the fly.



STEP 19 - Loosen the guy rope as shown to wrap around a stake.



STEP 21 - Adjust the tension on the guy rope by sliding the clew up or down.

WARNING:

Texsport tent fabrics are flame retardant treated per C.P.A.I.-84 specification. However, for your safety, we recommend that NO OPEN FLAME BE USED IN OR NEAR YOUR TENT.

SOME ADDITIONAL INFORMATION:

Make sure you stake the tent (with the tent stakes included) in windy weather or if you anticipate afternoon winds coming up while you are away from your campsite. Stake one corner, then stake each consecutive corner in a clockwise rotation. Make sure the tent remains tight. Always place your tent a safe distance from your campfire - unstaked tent placed upwind of the fire can be blown into the fire. Tent placed downwind of the fire are often showered with tiny sparks that can burn holes into the lightweight fabrics of your tent.

WATERPROOFING YOUR TENT:

Texsport tents are made from coated water-repellent fabrics. However, the sewing process, necessary in all tent fabrication, can cause water leakage where the sewing needles have perforated the fabric in the seams. Without treatment the tent will leak. Every new tent needs to be seam sealed to make it water tight. We recommend using Texsport Spray Waterproofing/Seam Sealer which may be found at your local outdoor outfitter or camping store.

TENT STAKES:

All tents should be staked down. The stakes supplied with your tent are effective for most conditions; however, specialized stakes are recommended in certain cases:

- a. Sand Stakes:Long broad stakes designed to hold in loose sand.
- b. Steel Stakes:Most effective in hard, rocky or frozen soil. These can rust and their sharp edges could damagethe tent if stored with the tent. In extremely hard soil a steel rod can be used to make the starter hole.
- c. Skewer Stakes: ..Lightweight, but less holding power than the standard stakes.
- d. Snow Stakes:The most common method is to bury objects with a great deal of surface area in the snow i.e.branches, aluminum pie plates, stuff sacks or tent bags filled with snow and buried: (thismay be referred to as the dead man method). Tents can also be secured to snow skis orpoles which are stuck into the snow.

ZIPPERS:

If zippers stick, lubricate with silicone. Never force a zipper which has material caught in it as this will bend the slider and prevent the zipper from closing. Continual use in a sandy environment can cause the slider to erode and fail to close the zipper.

STORAGE:

Tents should be stored dry and loosely folded away from heat and water. Keep out of reach of mice as they like to nest in tents. Never store directly on concrete as moisture and chemicals in concrete may damage the nylon.

WASHING:

Hand wash with a sponge using a mild soap. Never use detergents or washing machines as they may damage the coating or seams. remember to use seam sealer once tent has been washed to insure waterproofing.

HOW LONG WILL A NYLON TENT LAST?

Various conditions will affect the length of service which you receive:

- a. A nylon tent which is left erected all summer may last only one or two seasons as the sun's ultra-violet rays damage the nylon.
- b. Never store a tent wet or damp as mildew may develop. It will not harm nylon, however, mildew is unsightly and may damage other parts of the tent (i.e. zipper tapes).
- c. Avoid spraying insect repellent or hair sprays, etc. on tent fabric as they may be harmful.

REPAIR:

For small tears use an adhesive backed rip-stop nylon patch. We recommend Texsport Nylon Shower/shelter Repair Kit which may be found at your local outdoor outfitter or camping store.

QUESTIONS:

If you should have any questions, problems or comments, please call our Customer Service Department at **1-800-231-1402** or e-mail **info@texsport.com**. This Department is open M-F from 8 a.m.-5 p.m. CST.