




INSTRUCTIONS

#31674 - Folding Shovel

DO NOT APPLY EXCESSIVE FORCE TO THIS PRODUCT.

Exercise caution when using this item. The shovel blade is sharp and could cause cuts, lacerations, or other injuries if used carelessly. Always fold/unfold slowly and deliberately to avoid pinched fingers and skin.

Step 1 - Loosen screw lock.

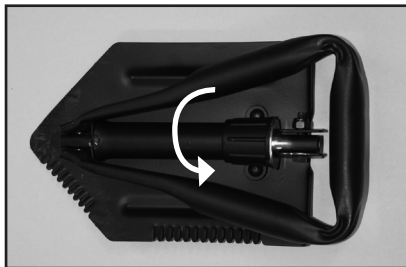

Step 2 - Screw lock should be in open position to unfold handle and shovel.



Step 3 - Tighten screw lock to secure.



Questions:

If you should have any questions, problems or comments, please call our Customer Service Department at 1-800-231-1402 or e-mail info@texsport.com. This Department is open M-F from 8 a.m.-5 p.m. CST.